
 

 







 










Icon	Description	Function
	Toggle Button	Toggles between pen and cursor mode *Controls the “piece of glass” used in pen mode.
	Previous	Moves to the previous page or slide in mouse/cursor mode *PP Mode (pen/previous)
	Next	Moves to the next page or slide in mouse/cursor mode
	Keyboard	Brings up the on-screen keyboard in mouse/cursor mode
	Color Palette	Select/Change the pen style and color *Yellow, orange, and highlighters stored here.
	Pen Color	Shortcut to red pen *Spotlight/reveal options. Controlled in driver.
	Pen Color	Shortcut to blue pen
	Pen Color	Shortcut to black pen
	Pen Size	Selects the thin pen size
	Pen Size	Selects the medium pen size
	Pen Size	Selects the thick pen size



Icon	Description	Function
	Pen Style	Solid line
	Pen Style	Dashed line
	Eraser	Small eraser
	Eraser	Large eraser
	Erase All	Clears all virtual ink from memory *NO UNDO
	Print	Prints the projected imagine with annotations to active default printer
	Save	Saves a copy of the board to a file *Default .jpeg file saved in My Documents folder
	Calibration Button	On/Off button for the “green screen” *Only used if you need to recalibrate

